

The back of Kendrick Bay viewed from the south.




EX01a viewed from the southeast.



EX01d viewed from the north.





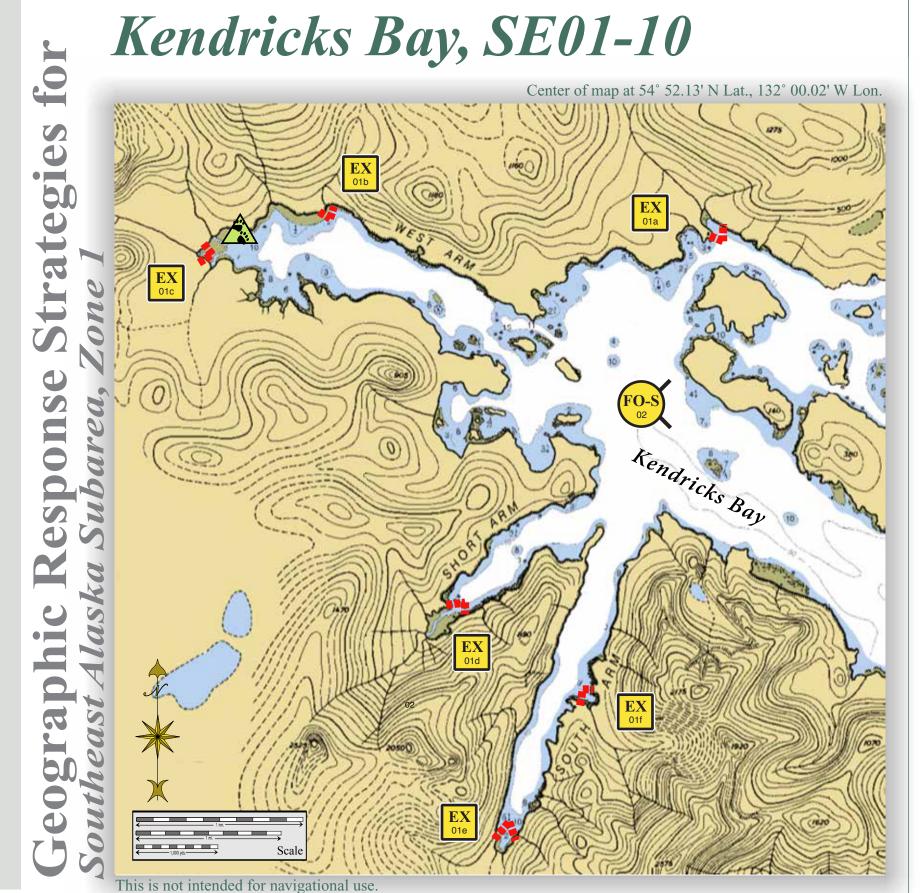

ID	Location and Description	Response Strategy	Implementation	Response Resources	Staging Area	Site Access	Resources Protected	Special Considerations
SE01-10-01 EX	A. Lat. 54° 54.07'N Lon. 132°01.14'W b. Lat. 54° 54.18'N Lon. 132°05.41'W Kendrick Creek c. Lat. 54° 54.06'N Lon. 132°06.60'W d. Lat. 54° 51.56'N Lon. 132°04.47'W e. Lat. 54° 51.10'N Lon. 132°02.54'W f. Lat. 54° 50.27'N Lon. 132°03.55'W	Exclusion Exclude oil from entering the Kendrick Bay creeks.	Deploy anchors and boom with skiffs (class 6). Place protected-water boom in a chevron pattern in front the creeks in Kendrick Bay. Tend throughout the tide. Boom Lengths: a. 350 ft. b. 250 ft. c. 500 ft. d. 300 ft. e. 300 ft. f. 350 ft.	Deployment Equipment 2050 ft. protected-water boom 10 ea. anchor systems 24 ea. anchor stakes Vessels 1 ea. class 3 2 ea. class 6 Personnel/Shift 5 ea. vessel crew Tending Vessels 1 ea. class 6 1 ea. class 3 Personnel/Shift 5 ea. vessel crew	Vessel Platform	Via marine waters Chart 17433_1	Fish: coho, chum, pink Habitat: sheltered rocky shores, gravel beach, exposed rocky shores & tidal flats.	Vessel master should have local knowledge. A population of bears may be present in the area. A bear guard is required during shore operations. Consult with Incident Command to ensure ADFG-Title 16 and ADNR-Title 41 permits have been obtained. Consult the Site Selection Matrix for cultural resources designation. Consult the ADEC "Spill Tactics for Alaska Responders" manual for additional information on the deployment of these tactics. Survey: not yet Tested: not yet
SE01-10-02	Kendrick Bay Nearshore waters in the general area of: Lat. 54° 52.13'N Lon. 132° 0.17'W	Free-oil Recovery Maximize free-oil recovery in the offshore & nearshore environment of Kendrick Bay depending on spill location and trajectory.	Deploy free-oil recovery strike teams upwind and up current of Kendrick Bay. Use aerial surveillance to locate incoming slicks.	Deploy multiple free-oil recovery strike teams as required to maximize interception of oil before it impacts sensitive areas.	Metlakatla 30 nm	Chart 17433_1	Same as SE01-10-01	Vessel master should have local knowledge. Use extreme caution, shoal waters with numerous reefs and rocks.